 




Electrolux

**FITTING INSTRUCTION
DISHWASHERS
2430-2435**

NEW PRESSURE SENSOR 1174745107



Old spare part code	New spare part code
1325162046	1174745107